

## SAP 2000 Level - 1

### CHAPTER 1 Introduction to SAP 2000

Program levels and features

### CHAPTER 2 The Structural Model

- 2.1 Units
- 2.2 Object and elements
- 2.3 Groups
- 2.4 Coordinate systems and Grids
- 2.5 Properties
- 2.6 Load cases
- 2.7 Functions
- 2.8 Analysis cases
- 2.9 Combinations
- 2.10 Design settings
- 2.11 Output and Display definitions

### CHAPTER 3 The Graphical User interface

- 3.1 SAP 2000 screen
  - 3.1.1 Main window
  - 3.1.2 Menu bar
  - 3.1.3 Toolbars
  - 3.1.4 Display windows
  - 3.1.5 Status bar
- 3.2 Using the mouse
- 3.3 Viewing options
  - 3.3.1 2D and 3D views
  - 3.3.2 Perspective
  - 3.3.3 Pan, zoom ,and 3D rotate
  - 3.3.4 Limits
  - 3.3.5 Element view options
  - 3.3.6 Other options
  - 3.3.7 Refreshing the display window
- 3.4 Basic operations
- 3.5 File operations
- 3.6 Defining named entities
- 3.7 Drawing
  - 3.7.1 Drawing Objects
  - 3.7.2 Snap tools
  - 3.7.3 Drawing controls
- 3.8 Selecting
  - 3.8.1 Selecting graphically
  - 3.8.2 Selecting by features
  - 3.8.3 Selecting by coordinates
  - 3.8.4 Selecting using tables

- 3.9 Editing
- 3.10 Assigning
- 3.11 Undo and Redo
- 3.12 Analyzing
- 3.13 Displaying
  - 3.13.1 Graphical displays
  - 3.13.2 Model definitions
  - 3.13.3 Analysis results
  - 3.13.4 Function plots
  - 3.13.5 Tabular displays
- 3.14 Designing
- 3.15 Locking and unlocking
- 3.16 Entering numerical data
- 3.17 Setting options

## **CHAPTER 4 Design Structural elements**

- 4.1 Analysis of Beams
  - 4.1.1 Edit Grids
  - 4.1.2 Define of Beam Section
  - 4.1.3 Draw the elements
  - 4.1.4 Restrains
  - 4.1.5 Loads
  - 4.1.6 Display Options
  - 4.1.7 Degree Of Freedom
  - 4.1.8 Deflection
  - 4.1.9 Straining Actions
  - 4.1.10 Global Axis – Local Axis
  - 4.1.11 Effect of Temperature
- 4.2 Analysis of Concrete and Steel Frames
  - 4.2.1 Edit Grids
  - 4.2.2 Define Frame Sections (R-section& T-section)
  - 4.2.3 Draw the frame
  - 4.2.4 Loads (Triangular Distributed load – Uniform Distributed load )
  - 4.2.5 Load Combinations
  - 4.2.6 Concentrated Moments-Loads
  - 4.2.7 Degree of Freedom
  - 4.2.8 Deformed Shape
  - 4.2.9 Straining Actions
- 4.3 Analysis of Multi-Story Frames
  - 4.3.1 Define Grid Data
  - 4.3.2 Define Frames (internal column – external column – beams)
  - 4.3.3 Draw Elements (columns – beams)
  - 4.3.4 Replicate the model
  - 4.3.5 Loads (Uniform Loads – joint loads)
  - 4.3.6 Deformed Shapes

#### 4.4 Analysis of Trusses

- 4.4.1 Define the grids
- 4.4.2 Define steel sections (Double angles-wide flange section)
- 4.4.3 Define (Upper-Lower chord & Diagonals & HeB-HBA)
- 4.4.4 Release for joints
- 4.4.5 Degree of freedom
- 4.4.6 Run the model
- 4.4.7 Show deformed shape
- 4.4.8 Show stresses ( Axial Force : Normal Force Diagram )

### **CHAPTER 5 Working with data tables**

- 5.1 Classification of tabular data
  - 4.1.1 Model definitions
  - 4.1.2 Analysis results
  - 4.1.3 Design results
- 5.2 Tables and fields
- 5.3 Uses of tabular data
  - 5.3.1 Selecting using tables
  - 5.3.2 Formatted tables for presentation
  - 5.3.3 Structured database tables
- 5.4 Displaying tabular data
- 5.5 Printing tabular data
- 5.6 Custom report writer
- 5.7 Format control for display and printing
- 5.8 Interactive Table editing
- 5.9 Exporting Tabular data
- 5.10 Importing tabular data
- 5.11 Automatic export during save
- 5.12 Export during analysis
- 5.13 Tabular database file formats
  - 5.13.1 Microsoft access data base
  - 5.13.2 Microsoft Excel spreadsheet
  - 5.13.3 Plain text file